ARAT Telephone mount for

Type: Mercedes SLK roadster
Model R171

Part No: 1244.1

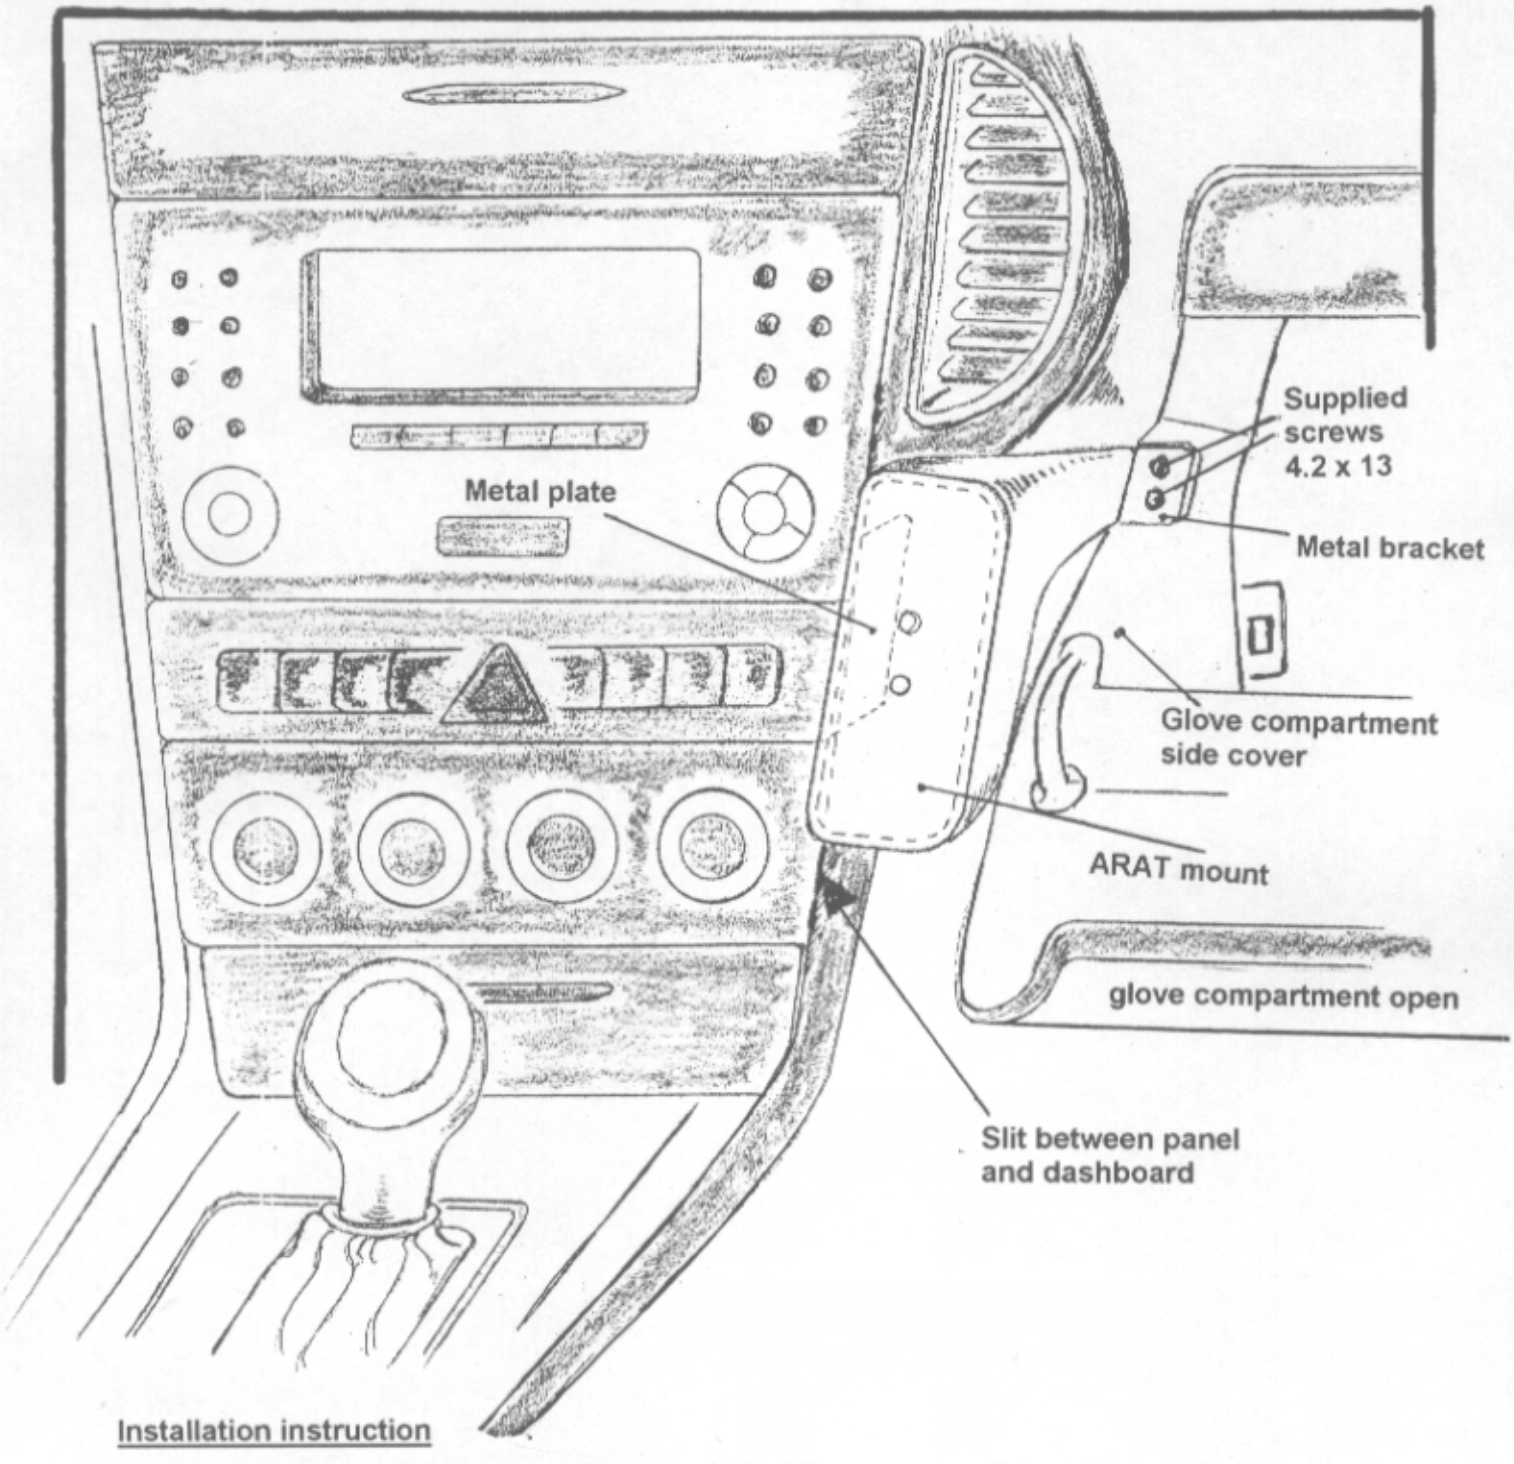

Installation instruction

1. Open the glove compartment
2. Place the ARAT mount to the contours of the dashboard, and slide the metal plate in the slit between the panel and dashbaord side, ensure that the contours of the ARAT mount snuggly conform to the side of the dashboard
3. With the supplied screws, 4.2 x 13, secure the mount through the metal bracket into the side of the glove compartment